

Before share, you should mount a stroage device and get the ip address.

Get IP address of X9S in Local Area Network




Check you device in media center.




Open the OpenWrt in browser. insert the IP address of X9S and input the default password: "root".



zidoo technology support center www.zidoo.tv

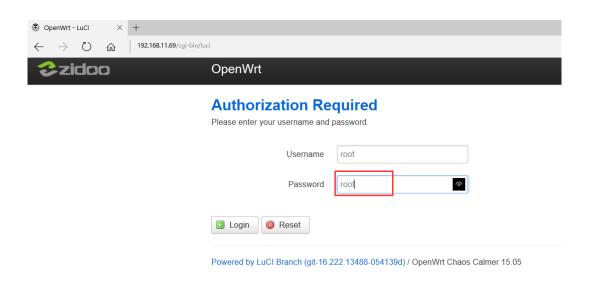


Expand "NAS Services" Click "Samba"

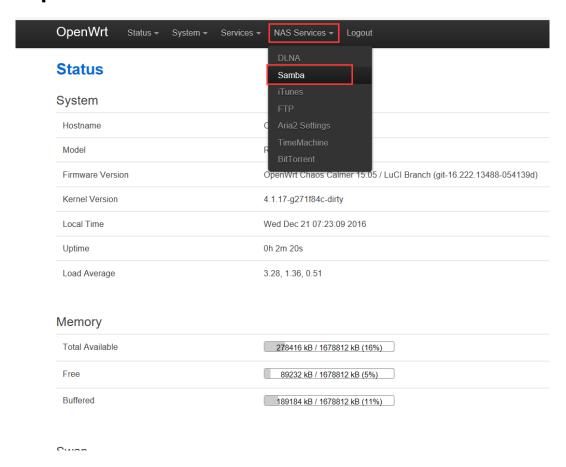

You can see the mnt device in the left list, then select the device which you want share in ready-only list.



zidoo technology support center www.zidoo.tv

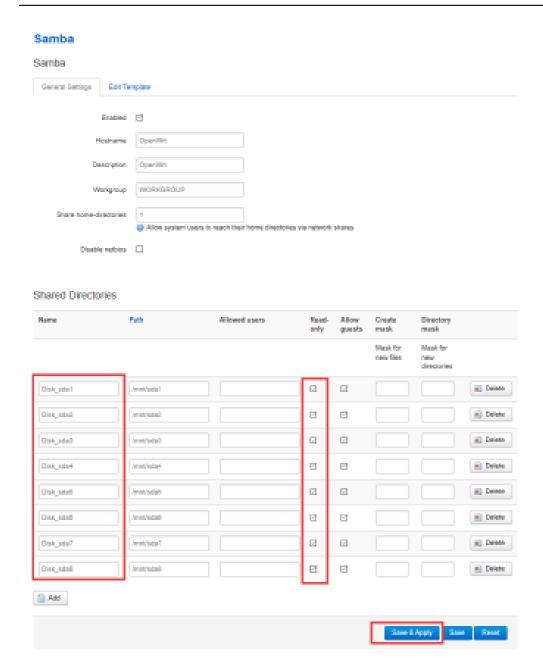

Then open "file resources manager" on your computer then insert the ip address of X9S, Click" Enter", All steps are completed.



zidoo technology support center

www.zidoo.tv

